

## Threaded Cup Wheel Wrench

The Thread Cup Wheel Wrench (PN: SX60004) is designed to remove threaded arbor cup wheels from grinders.

### ASSEMBLY INSTRUCTIONS:

Insert the bolts through the square holes in the same direction and screw the nuts onto the bolts. Tighten the nuts finger tight. They should be slightly loose.

### DIRECTIONS FOR USE:

Insert the bolts into the holes of the core of the cup wheel (fig.1), lock the grinder spindle, rotate the wrench counter clockwise (lefty loosey) to remove the cup wheel. If the bolts don't match up with the holes in the cup wheel, try loosening one or both of the nuts. This may give you enough movement to get the bolts to fit. If they still won't fit, put one bolt in the cup wheel and one on the edge of the cup wheel as illustrated in (fig.2). Do not hit the wrench with a hammer, if the cup wheel is being stubborn, use a piece of pipe and slip it over the handle of the cup wheel wrench. A hammer can damage the grinder, the wrench, the cup wheel, your hand and your pride.



FIG. 1



FIG. 2

**SAFETY:** Always use safety glasses and a dust mask when using this product.

